

78266

TOYOTA HIGHLANDER (ALL, INCL. HYBRID)

www.uhaul.com


3/6/2015

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 5,000 LBS. TRAILER WEIGHT & 750 LBS. TONGUE WEIGHT. ***DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.***

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.

** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY**

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

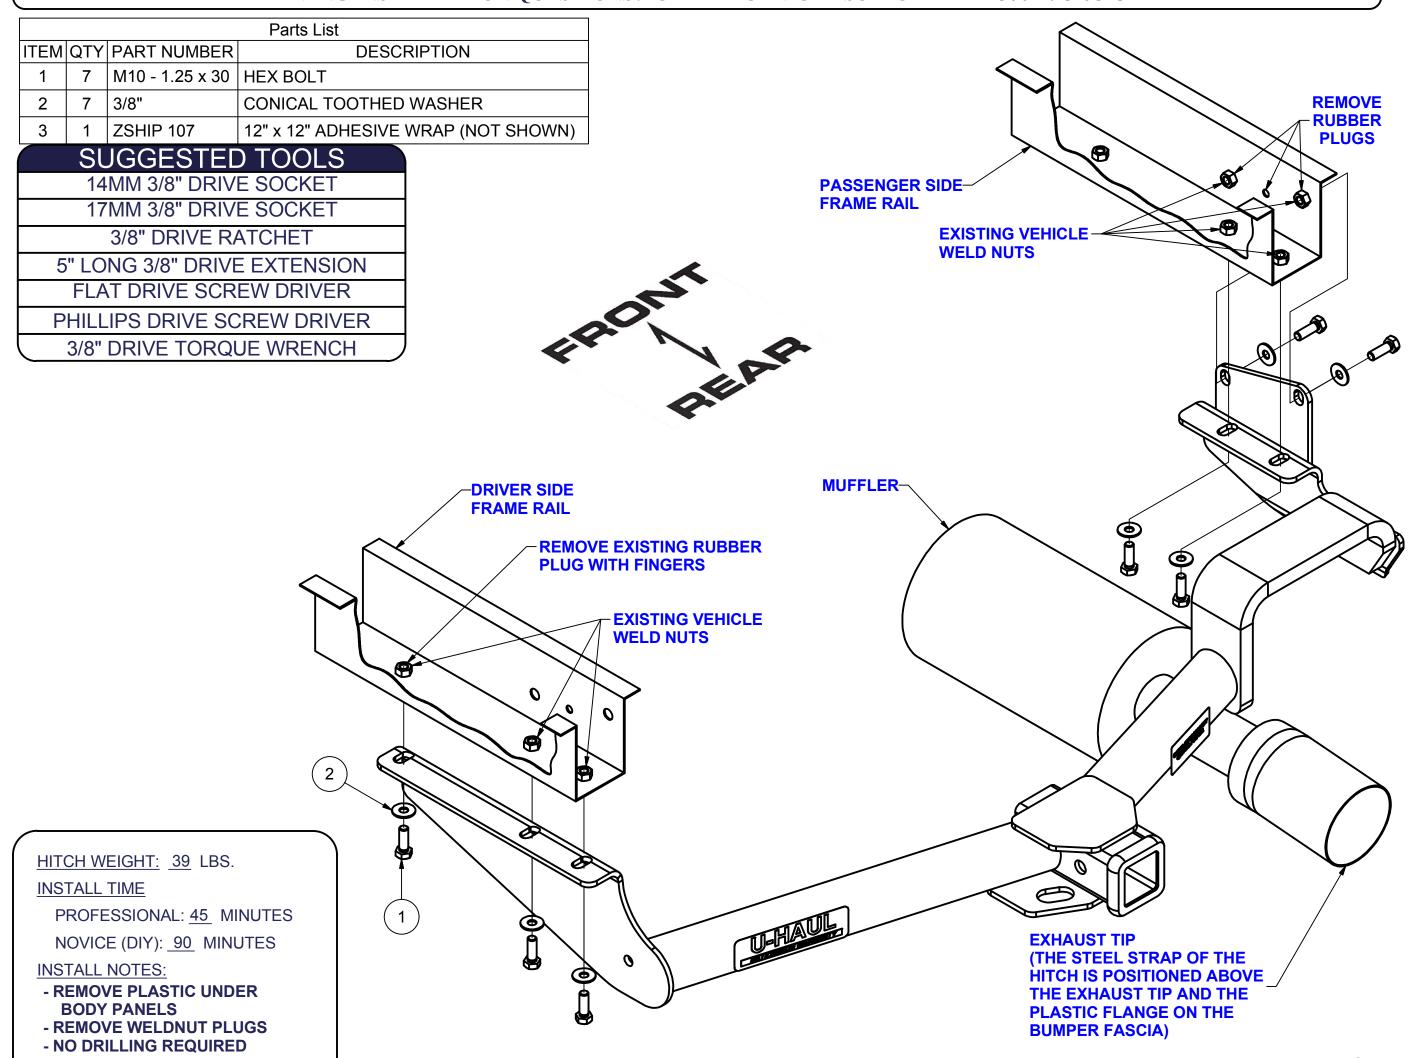

INSTALLATION STEPS

- 1. Using the flat head screw driver, remove all push fasteners in underbody panels. Use a phillips drive screw driver to remove remaining screws. Use the 14mm socket and ratchet to remove the bolt holding the passenger side panel. The passenger side will be re-installed later, the driver side panel will not and can be returned to owner.
- 2. Using the 14mm socket, remove both tow loops and and return to owner. Remove 4 rubber plugs (3 on passenger side and 1 on driver side).
- 3. Carefully raise hitch over exhaust towards muffler and pull back to bumper over the plastic flange on the bumper. Position the hitch so the holes line up with existing holes in the frame rail.
- 4. Install supplied 10M -1.25 x 30 hex head bolts and 3/8" conical tooth washers as shown above.
- 5. Using a torque wrench, torque all 10M 1.25 bolts to 48 lb-ft.
- 6. Reinstall passenger side under body panel onto vehicle using hardware removed in step 1.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.