



## U-haul's durable Adapters are easy-to-install and provide you with:

- Simple plug-in connections
- Industry standard wiring configurations
- Correct wiring color codes
- Retains 4-flat hook-up for use with second trailer


09/11

Made in Taiwan

13321-098

## Installation Instructions

1. Determine a suitable mounting point on the tow vehicle for the adapter. Make sure that the trailer's wire harness has adequate length to reach this point and mount the adapter.
2. Plug the 4-flat plug of the adapter onto a 4-flat plug extending from the vehicle. This will provide tail light, left and right turn functions.
3. Locate a grounding point near the adapter such as the vehicle's frame or cross member. Clean dirt and rustproofing from area. Secure white wire with eyelet. (Do not drill into vehicle floor or bed.)
4. Connect remaining wires by crimping yellow connectors. See diagram below for wire locations

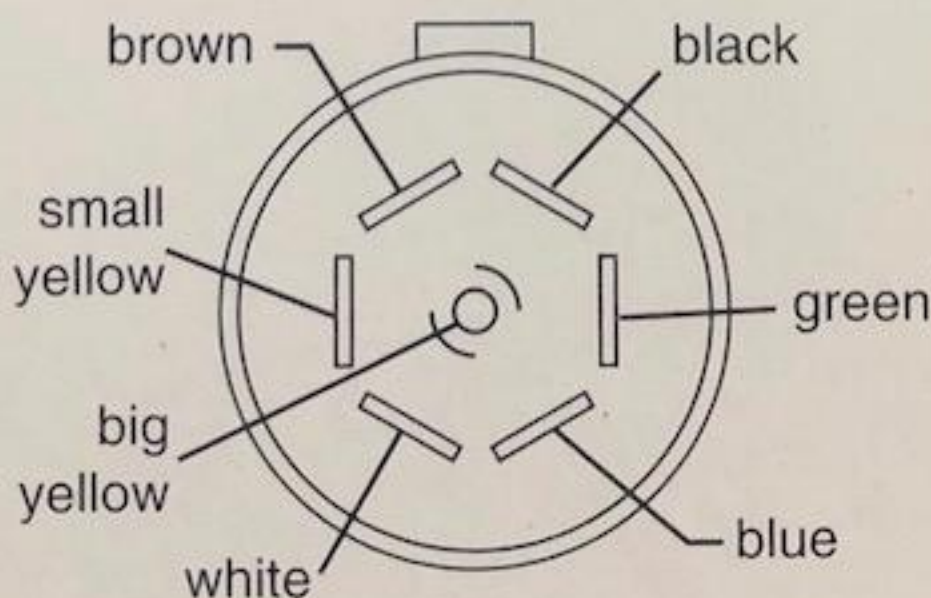

View looking into connector

Note: White wire in 4-flat is not connected to 7-way adapter. Large white wire must be grounded to assure proper trailer light function.