


Installation Instructions

Part Numbers:

Hyundai Santa Fe

75221

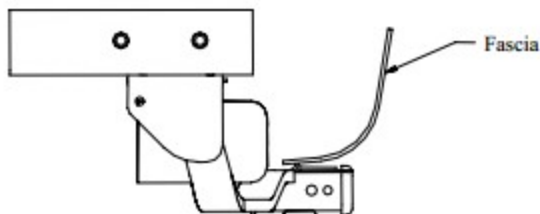

Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	Not For Use With Spring Bars	
Weight Carrying Ball Mount	4000 (1816 Kg.)	400 (182 Kg.)

Hitch Shown In Proper Position


Equipment Required:

Fastener Kit: 75471F

Wrenches: 16mm

Drill Bits: None

Wiring Access Location: SUV3, SUV4

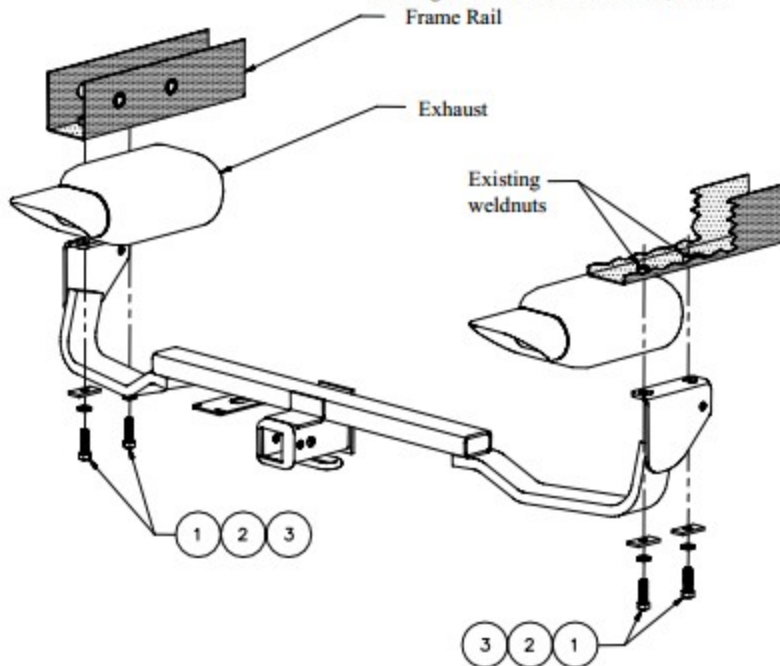

①	Qty. (4)	M10 X 1.25 X 30mm CL10.9	③	Qty. (4)	3/16 X 1.00 X 2.00 Block
②	Qty. (4)	7/16 Lockwasher			

1. Raise hitch into position.
2. Install M10 X 1.25 bolts 7/16 lockwasher and 3/16 X 1.00 X 2.00 Blocks into existing weldnuts inside vehicle frame rails.

Tighten all M10 X 1.25 CL10.9 fasteners with torque wrench to 71 Lb.-Ft. (96 N*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C. Regulation V-5 and SAE J684.