
11164 / 249414 / 247414

AUDI A4 SEDAN

1/30/2009

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS, TRAILER WEIGHT & 200 LBS, TONGUE WEIGHT,
DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

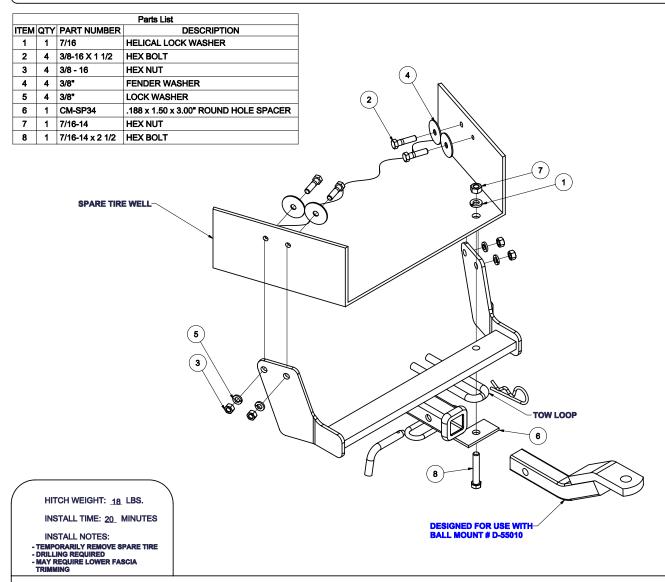

INSTALLATION STEPS

- 1) Clear car's tire well for drilling.
- 2) Place hitch into position on top of tow loop with hitch side plates resting against the sides of tire well. Install 7/16" fasteners as shown using SP34 spacer under the tow loop. Just snug.
- 3) Adjust hitch to be level and square with car and mark tire well in two places on each side for drilling.
- 4) Remove hitch and drill for 3/8" bolts. Re-position hitch on the car and install all fasteners. Large fender washers install inside tire well opposite the hitch.
- 5) Torque 7/16" fasteners to 50 ft-lb. 3/8" fasteners to 30 ft-lb.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.