

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS. TRAILER WEIGHT & 200 LBS. TONGUE WEIGHT.


**\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\***

**WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.**


**\*\* FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY\*\***

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	8	M8 - 1.25 x 30 HEX BOLT	HEX HEAD BOLT
2	8	3/8"	CONICAL TOOTHED WASHER
3	4	7/16-14 x 1 1/4	HEX BOLT
4	4	7/16 WASHER	WASHER
5	4	7/16-14	HEX FLANGE NUT

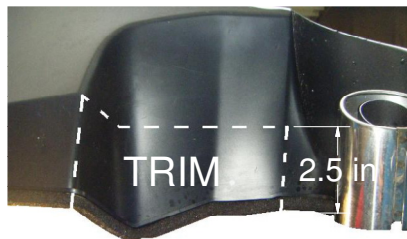

TRIM DIAGRAM FOR 2011 & 12 MODELS  
(PASSENGER SIDE SHOWN  
- TRIM BOTH SIDES)

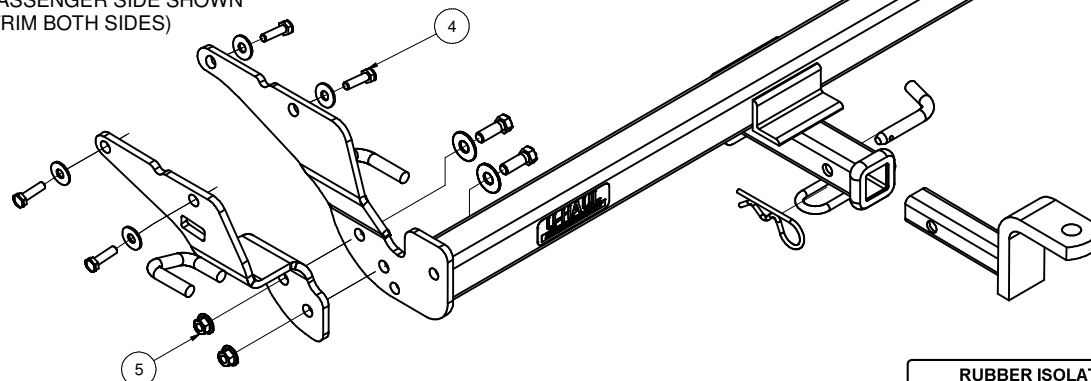


#### RUBBER ISOLATOR REMOVAL DIAGRAM

This technique can be used if an Exhaust Hanger Removal Pliers is not available.

Using a 5/8" open end wrench, slide the wrench up to the rubber isolator, cradling the hanger rod as shown. Next place the flat edge of a pry bar between the wrench and the hanger stop or hanger rod. Then simply rotate the pry bar toward the wrench to remove the rubber isolator.

Note: Using a spray lubricant or soapy water on the hanger rod and the rubber isolator helps removal.

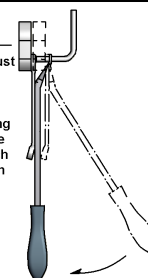

HITCH WEIGHT: 34 LBS.

#### INSTALL TIME

PROFESSIONAL: 60 MINUTES

NOVICE (DIY): 60 MINUTES

#### INSTALL NOTES:

- NO DRILLING REQUIRED
- LOWER REAR EXHAUST HANGERS
- REMOVE/RE-INSTALL HEAT SHIELDS AND FASCIA CLIPS
- MAY REQUIRE FASCIA TRIMMING

## INSTALLATION STEPS

- 1) Remove rearmost exhaust hanger brackets from vehicle and return to owner.
- 2) Remove heat shields and bumper fascia clips.
- 3) On 2011 and newer models, the fascia must be trimmed on both sides as shown above.
- 4) Raise hitch into position and loosely install fasteners into each frame rail.
- 5) Install driver side and passenger side hitch brackets into place using supplied fasteners as shown.
- 6) Torque all 7/16" fasteners to 70 ft-lbs, and all 8mm fasteners to 23 ft-lbs.
- 7) Re-install heat shields and bumper fascia clips removed in step (2).
- 8) Attach rubber exhaust absorbers onto exhaust brackets as shown.

**PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.**