

INSTALLATION INSTRUCTIONS

EQUIPMENT REQUIRED:

WIRING ACCESS LOCATION: SUV3

DRILL BITS:

HITCH REQUIRES 5/8" PIN AND CLIP IF STABILIZING PIN IS NOT INSTALLED.

WRENCHES: (TIGHTEN ALL FASTENERS WITH TORQUE WRENCH) 18mm, 19mm

VEHICLE


HITCH NO.

JEEP GRAND CHEROKEE

75139


DO NOT EXCEED LOWER OF
TOWING VEHICLE MFR'S RATINGS OR

HITCH TYPE ▼	MAX GROSS TRLR WT(LB)	MAX TONGUE WT(LB)
WEIGHT DISTRIBUTING	7500	750
WEIGHT CARRYING BALL MOUNT	5000	500

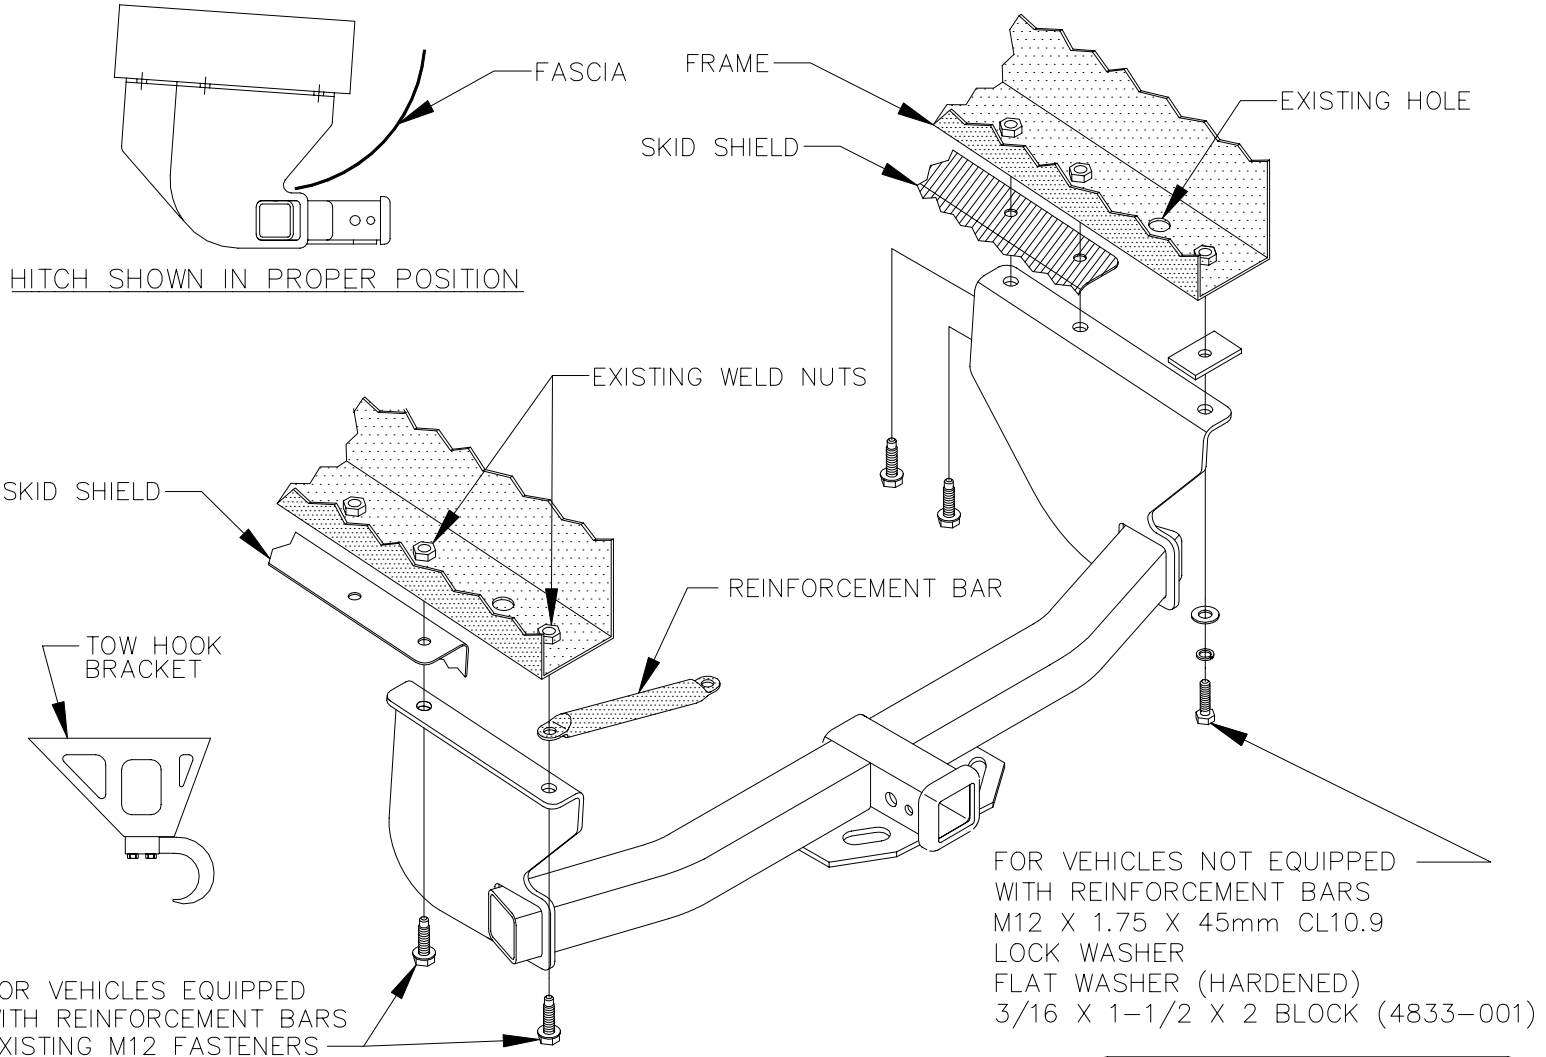

OPTIONAL LOCKING STABILIZING PIN

J-PIN

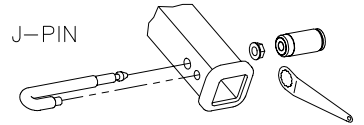

(Order Separately)

NO DRILLING REQUIRED

1. REMOVE TOW HOOK BRACKET IF PRESENT.
2. REMOVE THE M12 FASTENERS FROM THE FIVE REARMOST VEHICLE FRAME WELDNUTS. THE SKID SHIELD WILL REMAIN IN PLACE.
3. RAISE HITCH INTO POSITION AND INSTALL/RE-INSTALL FASTENERS AS SHOWN ABOVE.
NOTE: USE EXISTING FASTENERS IF VEHICLE IS EQUIPPED WITH REINFORCEMENT BARS.

TIGHTEN ALL M12 CL10.9 FASTENERS TO 75 LB-FT.

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR CONNECTING DEVICES AND TOWING SYSTEMS OF THE STATE OF NEW YORK AND V.E.S.C. REGULATION V-5.

APPROX WEIGHT (LB.)	42.8	FASTENER KIT NO.	F75139
---------------------	------	------------------	--------

NOTE: Check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Follow car maker's specs for maximum trailer weight and tongue weight. Do not cut access or attachment holes with a torch.



Canton, Michigan